



The AeroPole System tubes are designed to be joined to each other and the base plate with only an internal splice. If you use an AeroPole with a different type of connection the joint will not be as strong and may lead to a failure.



1552 S. Anaheim Blvd #B Anaheim 92805 USA
714-991-8732 • www.AeroPoleSystem.com

AeroPole System
Pole/Pin connection