


Component sizes:
3/8"-16 x 1" flat head bolt
3/8" fender washer
3/8" split lock washer

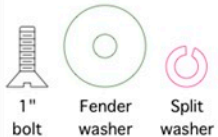

To assemble the base plate and steel pin:

Push 1" bolt through base.

Add large flat washer.

Add split lock washer.

Screw on 6" steel pin.

Tighten with a wrench and screwdriver.



1552 S. Anaheim Blvd #B Anaheim 92805 USA
714-991-8732 • www.AeroPoleSystem.com